

2B MACHINE RINSE AID

Description

A low foam general purpose rinse additive for machine ware washing.

Features and Benefits

Specially formulated for use in a wide range of ware washing machines.

Contains a special blend of non-ionic surfactants for rapid and spot and streak free drying on all cleaned surfaces in soft to hard water conditions.

Specially formulated low foam product ensures efficient operation. Suitable for use in a wide range of ware washing machines.

Use Instructions

For automatic dosing only – use only with dispenser (0.2 – 0.5ml/litre* hot water at 70 – 80°C). The correct concentration will be pre-set by your local representative.

Safe handling and storage information

Full guidance on the handling and safe use of the product can be obtained from the Safety Data Sheet.

Store in original container.

Avoid extremes of temperature.



**This dosage is according to optimal conditions, recommendations may vary, please consult with your Diversey representative for directions.*

2B MACHINE RINSE AID

Technical data

Appearance:	Clear blue liquid
pH:	7 (neat)
Relative density:	1.00
Odour:	Characteristic
Solubility:	Fully miscible in water

The above data is typical of normal production and should not be taken as a specification.

Product compatibility

Non corrosive toward mild and stainless steel, polythene, polypropylene, crockery and all soft metals.

Problem solving

Problems in automatic dishwashing can sometimes result from more than a single cause. It is necessary to check all the possible causes and, by the process of elimination, arrive at the solution. The problems that occur most frequently, the possible cause, and the solution are listed below.

Problem	Possible Cause	Solution
Spotting.	Water not hot enough.	Check hot water temperature.
	Dishes and cutlery not completely clean.	Check loading of the machine.
	Hard water or high dissolved minerals.	Increase concentration.
	Food residues.	Check rinse aid concentration, increase if necessary. Install water softener.
Specks.	Mechanical failure.	Check if pre-scrapping. Check water and detergent concentrations.
	Food particles.	Call for approved service.
		Check if pre-scrapping. Check water and detergent concentrations.
Dishwasher leaks.	Soiled or worn gasket	Clean gasket and side of door or replace gasket.
Heavy foam	Check if pre-scrapping.	Check water and detergent concentrations.
Black marks on china.	Metal marks from knives.	Soak in mild bleach solution.